

# JST

Hand crimping tool  
Type: WC-122

## Features

Parallel action  
operation

Ratchet release

Easy readjustment  
of load

Contact locator with  
insulation-stop

Precisely ground  
profiles


Ergonomic soft grips  
colour: green

Fully recyclable

Applicable terminal:  
< >HF-001T-0.8BS


Cross section range:  
Profile 1: 28 AWG/26AWG  
Profile 2: 24 AWG  
Profile 3: 22 AWG

Crimp height specification  
28 AWG - 0.60mm-0.65mm  
26 AWG - 0.70mm +/-0.05  
24 AWG - 0.75mm +/-0.05  
22 AWG - 0.80mm +/-0.05

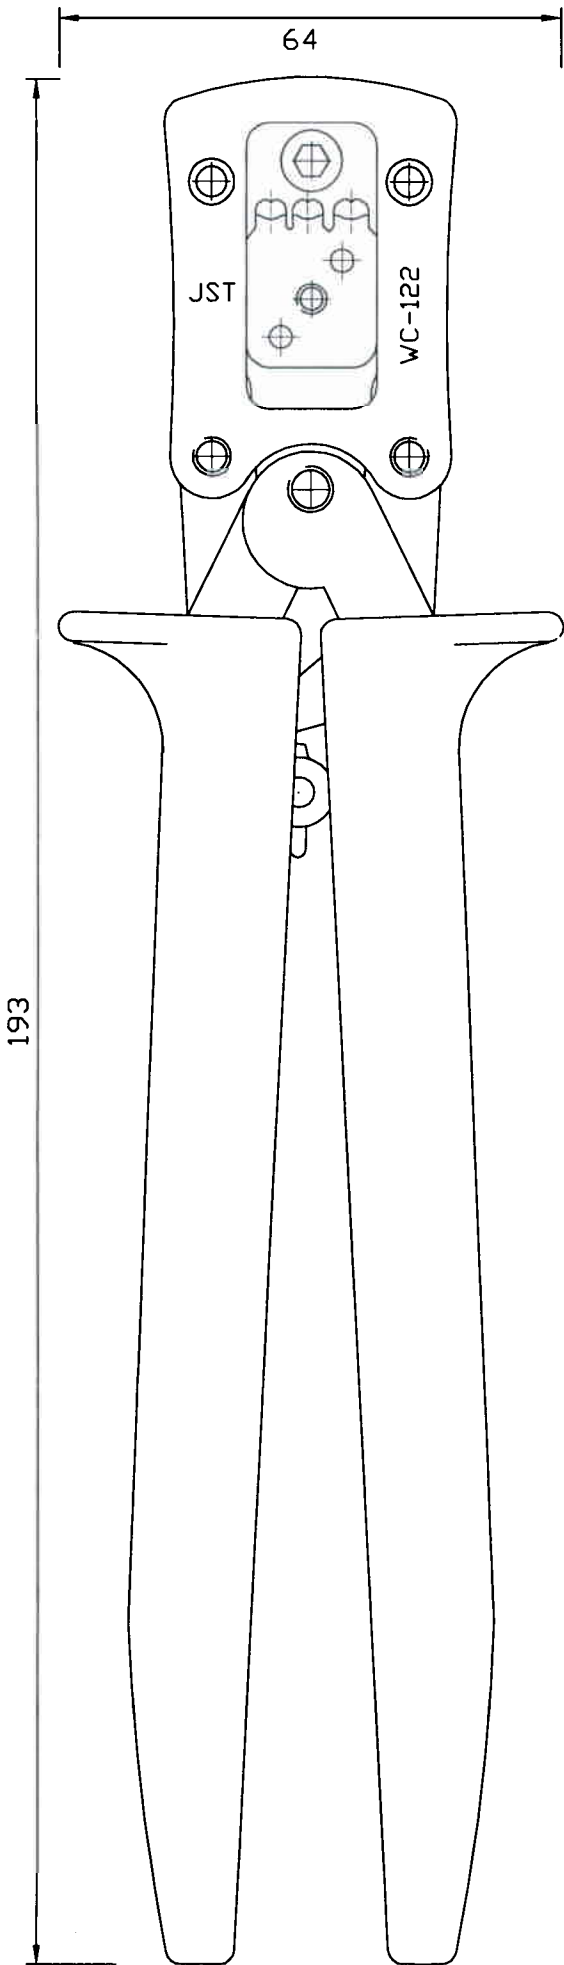


# OPERATION INSTRUCTIONS

DWG: JUKCT-003-02-00

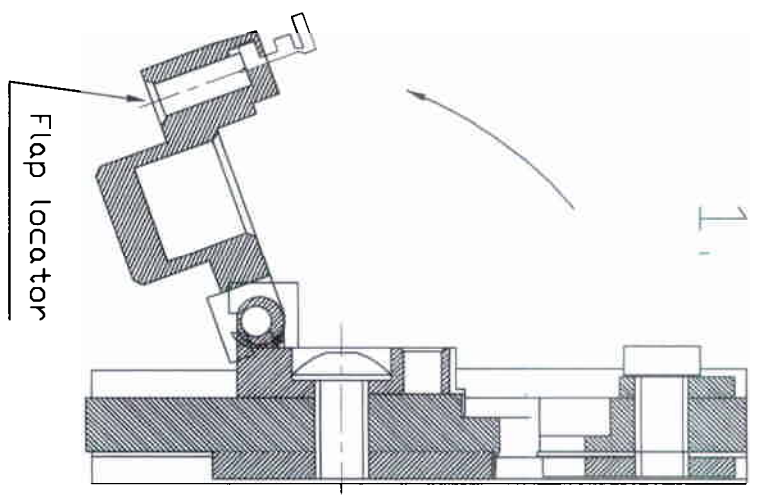


1. Open flap locator and insert contact up to stop.

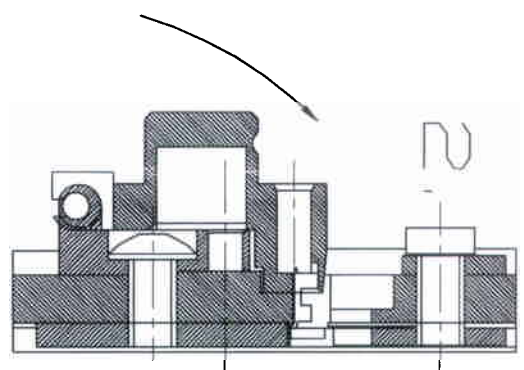

2. Close flap locator.

3. Close handtool until first ratchet to stop.

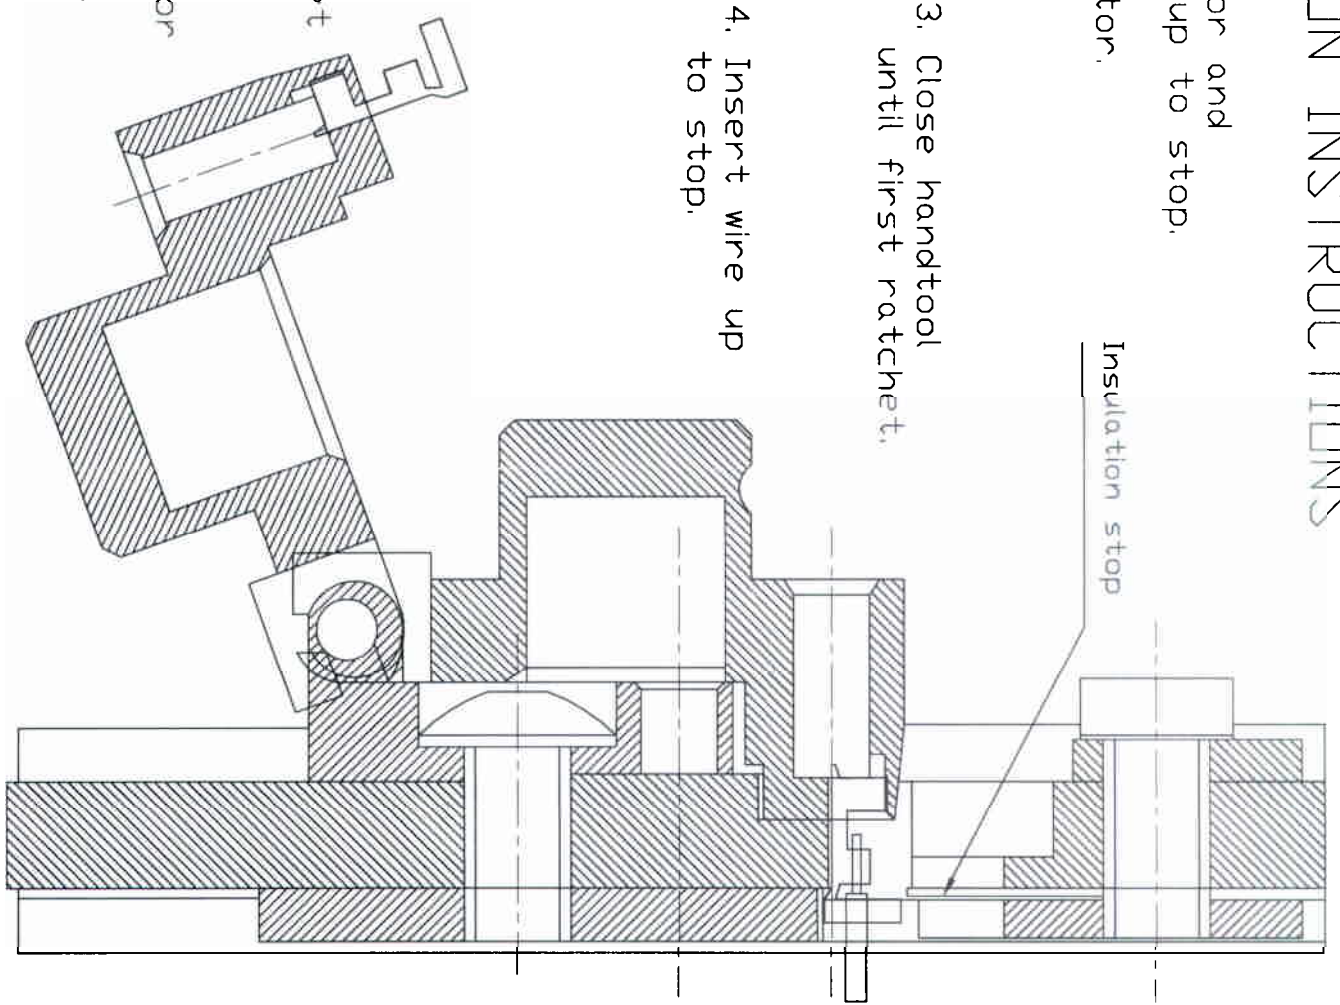

4. Insert wire up to stop.

5. Close handtool until the ratchet releases.

6. Open flap locator and carefully remove the wire.